

Object Enabler Installation Instructions



The CADmep+ and CADduct Object Enabler supports the following Autodesk products:

- AutoCAD 2007-2011 32/64bit
- NavisWorks
- ADT
- DWG TrueView
- 3D Viz
- 3D Studio Max

Installing the Object Enabler

- Close any Open Autodesk RealDWG applications i.e. AutoCAD, NavisWorks etc.
- Double Left click the file **OESetup.exe** to start the installation.
- Follow the installation dialog instruction.

Once the installation has completed, the installer will have automatically located and registered with all of the installed Autodesk products.

Whenever you open a drawing that includes any **MAP** objects, **AutoCAD, NavisWorks, ADT** etc. will automatically load the **DBX** program and the MAP objects will now be visible.

Manually Loading the Object Enabler

Note: If the ARX has been previously loaded (the CADmep+\Mech application executable) you will need to manually load the Object Enabler (DBX)

- Start AutoCAD
- Type APPLOAD, browse to the AutoCAD installation folder

Load the following module:

- MAPcadduct17.dbx (for AutoCAD 2007-2009)
- MAPcadduct17x64.dbx (for AutoCAD 2008-2009 64Bit)
- MAPcadduct18.dbx (for AutoCAD 2010-2011)
- MAPcadduct18x64.dbx (for AutoCAD 2010-2011 64Bit)

